

GENERAL RECOMMENDATIONS:

- ALL PIECES OF FURNITURE COME LEVELED AND ADJUSTED FROM THE FACTORY. THEREFORE, IF YOUR PIECES OF FURNITURE SHOW PROBLEMS OF THIS NATURE, CHECK IF THEY ARE PROPERLY LEVELED TO THE GROUND.
- KEEP YOUR FURNITURE IN AIRY ENVIRONMENTS. DON'T LET THEM PACKED OR INDOORS FOR A LONG TIME.
- TO INCREASE THE LIFETIME OF YOUR FURNITURE, DO NOT LET CHILDREN JUMP ON THEM OR SIT ON THEIR ARMS AND BACKS.
- DO NOT PUT PRESSURE ON THEM BY USING THEM AS LADDER OR SUPPORT.
- BE CAREFUL WHEN CARRYING OR LEVELING THEM TO AVOID WOOD WARPING.
- AVOID DRAGGING YOUR FURNITURE. ALWAYS TRY TO CARRY THEM CAREFULLY.
- NEVER USE SOLVENTS, ALCOHOL, ACETONE, THINNER, ABRASIVE PRODUCTS (STEEL SPONGE), DETERGENT OR ANY OTHER PRODUCT CONTAINING SODA OR ACIDS TO CLEAN OR REMOVE STAINS.
- PROTECT YOUR FURNITURE FROM WEATHER CONDITIONS IF IT IS NOT BEING USED IN ORDER TO PROLONG ITS USEFUL LIFE.
- KEEP YOUR FURNITURE AWAY FROM DIRECT SOURCES OF HEAT OR STRONG LIGHT INTENSITY.
- BEWARE OF SUNSCREEN LOTIONS AND REPELLENTS, SINCE THEY MAY CAUSE STAINS ON FABRICS.
- DO NOT WET THE CUSHIONS, SINCE WATER MAY PENETRATE INTO THE LAYERS OF FABRIC. HOWEVER, IF THIS HAPPENS, THE SYNTHETIC FEATURES OF THE CUSHION FILLER WILL MAKE THEM DRY QUICKLY SIMPLY BY PLACING THEM VERTICALLY IN A VENTILATED AREA.
- TO REMOVE STAINS FROM FABRICS, ALWAYS REFER TO PROFESSIONAL CLEANING, FOLLOWING THE INSTRUCTIONS OF THE COMPOSITION LABEL.
- WHEN YOU STOP USING THE FURNITURE FOR AN EXTENDED PERIOD OF TIME, REMOVE THE CUSHIONS (IF ANY) AND PLACE THEM IN AN AIRY AND DRY PLACE TO AVOID MOLD
- FOR IN SHADE PRODUCTS, BOTH INTERNAL AND EXTERNAL FABRICS ARE AVAILABLE. THEREFORE, ATTENTION SHOULD BE PAID TO THE SPECIFIC USE OF THE PRODUCT, AND THE CARE IT WILL REQUIRE.
- PRODUCTS MUST BE USED ON BALCONIES AND COVERED BALCONIES, WITHOUT MUCH INCIDENCE OF WEATHER. AVOID USING THE PRODUCT IN OPEN PLACES OR IN DIRECT SUNLIGHT.
- WHEN YOU STOP USING THE FURNITURE FOR AN EXTENDED PERIOD OF TIME, REMOVE THE CUSHIONS (IF ANY) AND PLACE THEM IN AN AIRY AND DRY PLACE TO AVOID MOLD.

Cleaning and maintenance of fabrics

-Saccaro In Shade products are not designed for outdoors. However, these products can be used on balconies and covered spaces, as long as protected from the weather, humidity and sunlight. To preserve your product, keep it away from light and intense heat sources and avoid leaving it exposed to direct sunlight, as these factors can damage and change the colors of the yarns.

The products in shade can be manufactured using indoor or outdoor fabrics, thus, the choice of the tissue must take into account the location where the product will be exposed:

- If there is sunlight, it is recommended the use of outdoor fabrics, which have protection to ultraviolet rays.
- If the product is used around pools of we recommend the use of outdoor fabrics that have resistance to pool chlorine and sunscreen lotions. Acrylics and Sunbrella®
- Avoid prolonged contact with oily substances (creams, suntan lotions, food products) to avoid stains in your furniture;
- Weekly clean the surface of the acrylic fabrics by suction or using soft-bristled brushes. This way, you will avoid that dirt (dust) particles get attach to your furniture, making its removal more difficult;
- In patterned fabrics, avoid excessive friction, as this could remove pigments of the fabric;
- Never use abrasive products (hard bristle brushes);
- Do not use chemicals for cleaning (alkaline or chlorinated). Wash only with water (room temperature) and neutral soap;
- Check the fabric composition label. It contains specific guidelines to clean each type of fabric;
- Do not use steam iron or excessive heat to avoid shrinkage and yellowing of the fiber (temperatures above 110°C);
- For 100% cotton fabric, constantly clean using a soft sponge or a cloth moistened with neutral soap.

Cleaning and maintenance of covers

Upholstered pieces of furniture with a loose cover convey are relaxed, casual-looking visual where stiffness and alignment are not part of these products concept. Depending on the fabric used for these covers, they can be more or less structured.

To maintain the appearance of your cover, stretch the cover on your upholstery after using it. Fluff the cushions so that their original aspect returns. To clean them, follow the procedures below:

- Dust it periodically with vacuum cleaner or a soft- bristle brush.
- Covers can be removed for heavier cleaning. Always read the instructions in the Composition Label of each fabric.
- In case of spilled liquids or stains, follow the same cleaning procedure to clean upholstery.
- Depending on the fabric, covers may shrink after they are washed.

Warranty and service

This product has legal warranty of 03 (three) months and contractual warranty of 09 (nine) months, summing up 01 (one) year warranty. This warranty is valid if the product is used under normal conditions, following the guidelines contained in this manual. This warranty also provides assistance in the case of manufacturing defects (assembling, painting, weaving, and welding) and components defects (screws, hinges, locks, stops/ frames and slinging mechanisms).

This warranty does not cover defects caused by misuse or abuse, lack of care and maintenance, natural fading of fabrics, broken glass or scratches resultant from use. The fabrics specifically developed for indoors use are not covered by warranty when exposed to use in environments subject to bad weather (Sun, rain or climatic variation).

To be liable to Technical Assistance, the client must refer it to the nearest Saccaro Store, or contact our Customer Service +1 (305) 576 0103.

It is up to the client:

- Submit the invoice and this Conservation, Cleaning and Warranty Manual at the time of service.
- Take and pick up the product at your own expense. Important: Technical Assistance provision will not extend the warranty period of the product.